

Index

A

About MaxLoad, 1.8
Add new user, 1.11
Adding Arrows, 10.11
Adding Text, 10.10
Adjust authorization, 1.13
Algorithm Options, 4.8, 5.7, 6.7
Align Buttons, 9.5
Alignment, 3.30
Allowed Vertical, 3.5
Annotate Printouts, 10.10
ASCII, 10.13, 12.3
Axle Count, 3.37
Axle Weights, 3.4
Axles Tab (Define Vehicle), 3.37

B

Breaking a Placement, 9.20
Building a Placement, 9.15
Button Windows, 2.3, 2.4
By Priority, 5.5
By SKU Ratio, 5.6
By Stop Off, 4.6, 5.5

C

CalcAllTrucks, 8.9, 8.10, 11.13
Calculate Button, 4.3-4.4
Ceiling Clearance, 4.6, 6.5
Center of Gravity, 11.4
Change Orientation of SKU, 9.9
Change Vertical Dimension of SKU, 9.9
Check Boxes, 11.21
Comma delimited files, 12.1
Comma Separated Values, 12.3
Comments Tab, 4.16, 5.10, 6.10, 7.9
Common Features, 2.9
Configuration Dialog Box, 11.2
Configuration Settings, 11.1
Container Record Format, 12.13
Control Center, 1.7, 2.2, 4.2

Corner Support, 11.13
Costing, 11.13
Create UL Button, 3.3
Create UnitLoad, 3.19, 3.24–3.26
CSV, 12.3
Custom Export, 12.25
Custom Import, 12.17
Custom Label, 11.9
Cut List, 8.9, 8.11, 9.2, 9.6

D

Dead stacking, 3.8
Deck Boards, 3.30
Defaults Tab (Measurement Input), 11.17
Define Single-SKU Manifest, 7.10
Define Pallet Manifest, 5.12-5.14
Define Pallet SKU, 3.4
Define Pallet Load, 3.19
Define SKU, 3.2, 3.20, 3.24
Define Slipsheet, 3.32
Define Tote, 3.49-3.50, 3.50
Define Tote Manifest, 6.11-6.12
Define Truck Manifest, 4.24
Define Vehicle, 3.38-3.43
Delete Pallet/Slipsheet, 3.28, 3.31, 3.34
Delete Pallet, 3.34
Delete SKU, 3.27
Delete Tote, 3.51
Delete Vehicle, 3.43
Description, 3.36, 3.45
Diagonal Pattern, 7.7
Drop Deck, 3.36

E

Edit a Load, 9.14
Edit a Solution, 9.1
Editor Screen, 9.2
E-mail, 2.12
ERP Systems, 12.1
Exit MaxLoad Pro, 2.15
Expand Columns in SKU List, 4.23
Export by Placement, 12.24

Export Databases, 12.22
Export File Example, 12.27
Extended Key Mode, 11.5

F

Fill Item, 4.22
Floor Loading, 3.8
Floor to Ceiling, 4.9
Fonts, 11.10
Front to Back, 4.8

G

General Tab (Create Unitload), 3.14
g.o.d. Window, 8.3, 11.8
g.o.d. System, 2.10
Global Settings, 11.12
Graphics Tab, 3.14
Grid Intervals, 11.8
Grid Lines, 11.6, 11.8

H

Height for Top Layer, 4.11
Help Menu

I

Icons, 8.3-8.4, 9.3-9.5
Import Functions, 12.2-12.3
Import Picklist, 12.19
INI File, 1.10, 12.16
Install MaxLoad Pro, 1.3
Install on Network, 1.4
Install on Standalone PC, 1.3

K

Keep Like SKUs, 4.6
Keep Order on same Truck, 4.11
Keep Same Orders, 4.6
King Pin, 3.38

L

Label, 3.11
Left to Right, 4.9
License Information, 11.3
Load Algorithm Options, 4.8, 5.7, 6.7
Load List, 8.9
Load Optimize Options, 6.8

Load Options, 6.4
Load Statistics, 8.3, 8.6, 9.3, 9.11
Load Placement, 9.4
Loading Algorithms, 4.8, 5.7, 6.7
Loading by SKU Ratio, 4.6, 5.6
Loading Options, 4.5
Location, 3.11
Login, 1.6, 1.11, 2.13
Loose Fill items, 4.11
Lotus Notes, 2.12

M

Manifest Button Windows, 2.4, 2.13
Manifest List (Pallet Manifest), 7.11
Manifest List (Single-SKU Manifest), 7.9
Manifest List (Tote Manifest), 6.10
Manifest List (Truck Manifest), 4.18
Manifest Record Format, 12.11
Manifest View Screen, 8.2
Maximum Height (Pallet), 5.3
Maximum Overhang (Pallet), 5.4
Maximum Priority Overlap, 4.7
Maximum SKU Height, 3.15, 3.17
Maximum Vertical Gap, 4.7
Maximum Weight (Pallet), 5.4
Maximum Weight (Unitload), 3.15, 3.17
Maximum Weight (Vehicle), 3.36
Measurement Input Fields, 11.17
Measurement Units, 11.9
Menu Bar, 2.3, 2.6
Menu Options, 2.6
Minimum Ceiling Clearance, 4.6
Mixed Pallet Tab, 4.14, 5.3
Mixed Pallet, 4.5, 4.20
Modify Pallet/Slipsheet, 3.33
Modify SKU, 3.27
Modify Tote, 3.51
Modify Vehicle, 3.43
Moving MaxLoad, 1.13
Moving SKU, 9.16-9.19
Multi Block Pallet Pattern, 7.6
Multi Dim Pallet Pattern, 7.8
Multi Layer Pallet Pattern, 7.7
Multi Print, 10.5
Multi Surface Pallet Pattern, 7.8
Multi-Zone, 3.35, 3.38

N

Next Truck, 8.12
New Features, ix
Non-Measurement Input Fields, 11.19

O

Opening a Manifest, 2.13
Options Tab, 4.5, 5.5, 6.4, 7.5
Optimization Options, 5.8
Optimize For Space, 4.10
Optimize For Speed, 4.10
Order Number, 4.21
Orientation Box, 9.2, 9.8
Overhang, 3.5, 3.15, 3.25, 4.14

P

Pallet Alignment, 3.30
Pallet Construction, 3.29
Pallet Details, 11.5
Pallet Dimension, 3.29
Pallet Manifest Pick List Screen, 5.2
Pallet Patterns, 3.15-3.16, 7.5-7.8
Pallet SKU, 3.4
Pallet Styles, 3.14, 3.28
Pallet/Slipsheet Database, 3.28
Password, 1.11, 1.12, 11.13
Pattern Styles, 3.26
PDF Documents, 10.3
Pick List Screen, 4.2, 5.2, 6.2, 7.2
Pick List Record Format, 12.14
Piece Count, 3.6, 4.22
Pinwheel Pattern, 4.10
Placement List, 8.8
Placement Numbering, 11.9
Placing SKU, 9.14
Preferred Vertical, 3.5
Print Options, 10.4, 11.9
Print Preview, 2.12, 10.8
Print Reports, 10.6
Print to File, 10.3
Printer Resolution, 11.10
Printer Setup, 10.2
Printing Databases, 10.7
Printing Toolbar, 10.9
Printing, 5.15, 6.12

Priority Overlap, 4.7, 5.6
Properties Dialog Box, 11.16
Properties Sheets, 11.15
Put on Mixed Pallet, 3.7
Put All Button, 8.4
Put Placement Button, 8.4

R

Radio Buttons, 11.20
Railcar, 3.38
Record Formats, 12.7-12.14
Remove All Button, 8.3
Remove Placement Button, 8.3
Remove SKU Button, 8.4
Removing SKU, 9.19
Rotate Buttons, 9.5
Rotate SKU, 9.10
Rotate View, 8.5

S

Save to Library, 11.6
Saving a Load, 9.23
Screen Colors, 11.7
Setup Client Machines, 1.5
Show Dimensions, 11.4
Show Next Vehicle, 11.3
Size Tab, 3.3
SKU Description, 3.4
SKU Information, 8.13, 9.12
SKU List, 4.16
SKU Number, 3.4
SKU Record Format, 12.7
Slipsheet, 30
Smart Pallet Placement, 4.11
Snap Button, 9.3, 9.11
Snap Function, 11.3
Soldiered Pallet Pattern, 7.7
Solution List, 8.7
Sort function, 2.11
Space Evenly, 4.9
Split Loads, 11.13
Stack Code, 3.8, 3.16, 3.47
Stack Height, 3.10, 3.26, 3.48
Stack Matrix, 3.10, 3.12
Stack Matrix Path, 11.10
Stack Rules, 3.8, 3.16, 3.26, 3.46

Stack Weight, 3.26, 3.48
Stacking Violations, 8.4, 9.4, 9.21
Stacking Violation Example, 9.22
Staggered Pallet Pattern, 7.7
Staggered Rolls, 4.11
Status Bar, 9.3, 9.12
Stop Off Color, 11.14
Stop Off Dividers, 11.7
Stop Off Function, 4.19
Stop Off Overlap, 5.6
Supervisor Functions, 11.12
Supervisor Login, 11.1
System Information, 1.9
System Requirements, 1.2

T

Tab System, 2.9
Tabs (View Screen), 8.7
Tare Weight, 3.38
Tool Bar, 2.3, 2.7, 8.2, 9.2-9.3
Tool Bar Icons, 8.3-8.4, 9.3-9.5
Tool Bar Options, 2.7
Tote Description, 3.45
Tote Dimension 3.45
Tote List, 6.3
Tote Manifest
Tote SKU, 3.3
Tote, 3.45
Truck Manifest, 4.1
Truck Weight Limit, 4.12

U

Uninstalling MaxLoad, 1.13
Unit Type, 11.18
Unitize, 3.7
Unitload, 3.14, 4.5, 9.3
Unitload Height, 3.15, 3.17
Unitload Option, 4.11, 4.19
Unitload Record Format, 12.9
Unitload Solution, 3.17
Unitload Weight, 3.15, 3.17
Units data field format, 12.5

V

Vehicle Description, 3.36
Vehicle Dimension 3.36

Vehicle Tab, 4.3
Vehicle Type, 3.36, 4.4, 7.4
Vertical Gap, 4.7, 5.6, 6.5
View Buttons, 8.3-8.4, 9.2, 9.10
View By Leading Edge, 8.6
View By Placement, 8.6
View By Stop Off, 8.6
View Options, 3.18

W

Weight Limit, 4.7

X

XML, 12.15, 12.23

Z

Zoom In and Out, 8.5, 9.10