 


# Inside to Outside Calculations



Do you ever have trouble with the dimensions TOPS Pro comes up with? Perhaps you enter a box Inside Dimensions (ID) and the Outside Dimension (OD) TPW reports wrong. This document will cover *how* TOPS for Windows calculates OD from ID (or vice versa).


When working with fluted material, TOPS Pro uses the saved values in the TOPS Config program, under Define|Flutes. For instance, the default thickness for "C" Flute is 5/32 (.1625) of an inch. When you select "C" Flute in TOPS Pro, we insert that value for the flute. Some companies use 3/16 of an inch for "C" Flute instead. If you do, change the "Thickness" value in the Config program to match what your flute thickness is.

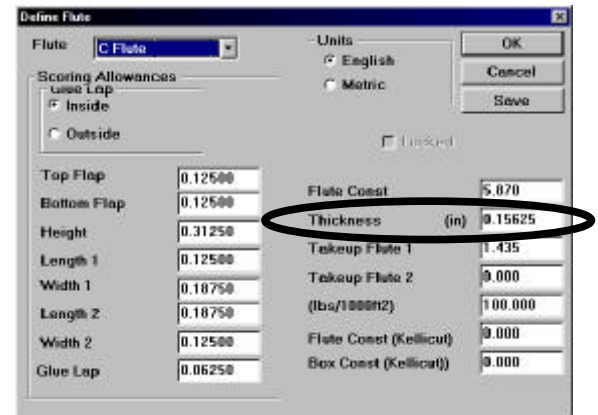

Alternately, if you select "Other" instead of Flute for your carton or box, TOPS Pro will use the value you enter for the Caliper instead of the flute value.

TOPS Pro multiplies the flute value or thickness with the number of pieces of corrugate (thicknesses) of your *Box Style*. The *thicknesses* are the pieces of corrugate along the length, width, and height of a box.

TOPS Pro stores this information in the Define|Box Style menu.

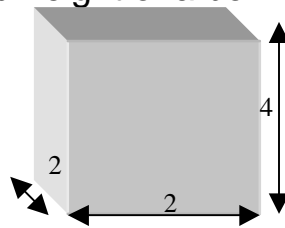

Here's how we calculate the ID/OD:

Take the number of thicknesses for *each* dimension and multiply that by the flute or caliper of the box.

(Example: 5/32 x 2 for the Length. 5/32 x 2 for the Width. 5/32 x 4 for the height.)

You have complete flexibility to edit either of the two areas where TOPS stores this information. Once all of your values are correct, TOPS will report the correct values for you.

If you have any questions about this document, please contact TOPS Technical Support.

